



## Scottoil: HCR Mudguard Adapter Kit (SA-0072)

### Installation Guide for using SA-0072




This guide supplements the individual Installation Guides & Fitting Instructions provided with the kit.

See our Non-Standard Fittings Guide to check which models require this adapter kit.



Fit the bracket to the mudguard using the middle hole on the bracket, and the bolt and washers as shown in the above photographs.

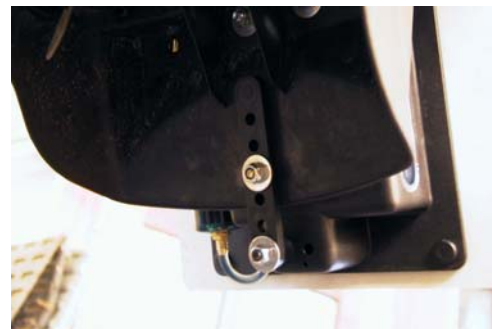

Using the 10mm spacer in the HCR Kit, bolt the HCR Adapter bracket to the HCR as shown above. If you have any queries or comments, or require any additional parts, please don't hesitate to contact our technical department.



Finally, have you tried our **FS365 anti corrosion spray**? It's a surfactant corrosion inhibitor that can be easily sprayed all over your bike to protect it from corrosion, all year round.

Its great at getting into all the nooks and crannies protecting your bike from rust and road salt, summer and winter & polishing up to a nice shine.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email [technical@scottoiler.com](mailto:technical@scottoiler.com) for assistance. Thank you.

Scottoil Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 [www.scottoiler.com](http://www.scottoiler.com)

